



# **Wireless Modem Exchange (WMX) Protocol Description**

*Document Version D6*

*Jan 2019*

***Raveon Technologies Corporation***

2320 Cousteau Court

Vista, CA 92081

[www.raveon.com](http://www.raveon.com)

# Table of Contents

1.	WMX Revision Log.....	3
2.	WMX Overview .....	3
2.1.	What is WMX? .....	3
2.2.	Protocol Features .....	3
2.3.	Why another Protocol? .....	4
2.4.	WMX Protocol Stack.....	4
2.5.	WMX Frames.....	4
2.6.	Enabling WMX.....	5
3.	Frame Format .....	6
3.1.	WMX Frame Format .....	6
3.2.	Control Field .....	7
3.3.	WMX Control Byte List.....	7
3.4.	Command Request Field Format.....	8
3.5.	Checksum.....	8
3.6.	RSSI Field.....	8
4.	WMX Messaging.....	10
4.1.	Sending Data Bytes .....	10
4.2.	Sending Raw Binary Data.....	11
4.3.	Binary Encoding.....	12
4.4.	Receiving Data .....	12
	POCSAG Note:.....	14
4.5.	Binary Decoding .....	14
4.6.	Issuing Commands .....	15
	Implementation Notes .....	16
	Commands that Support WMX .....	17
4.7.	Receiving Responses .....	17
4.8.	Modem Status Responses.....	18
	Modem Status Data Field .....	18
5.	WMX Parsing Conventions .....	19

# 1. WMX Revision Log

---

<u>M7 Version</u>	<u>Date</u>	<u>Changes</u>
C0	Dec 3, 2009	Added RSSI field
C1	Jan, 2011	Added explanation of data encoding method
D1	Jan, 2013	Added Raw Bit transfer packet format
D2	Apr, 2013	Corrected errors involving field separator 2
D4	July, 2013	Added draft of WMX status ACKs
D5	Dec, 2013	Added POCSAG Note.

## 2. WMX Overview

---

### 2.1. What is WMX?

WMX is the communication protocol used in Raveon's wireless modems, to allow a user to have full control over these sending and receiving of data. It enables the user of a Raveon modem to specify the destination ID when sending data. It also allows the user to identify the source of data when data is received.

Without the WMX protocol, a Raveon wireless modem transparently sends and receives data to and from other Raveon modems, and the ID of the modems in the network are all pre-configured at time of installation.

With WMX, the user may specify "on-the-fly" the destination ID of data that is to be transmitted. All received data is passed to the user in a pre-defined format, so the source of the data may be determined.

Also, the WMX protocol allows for sending "Commands" to other radio modems. This allows the user to execute certain functions or control certain features of another remote modem – using the WMX Command protocol.

To enable the WMX protocol on the M7 series of radios, issue the **WMX 1** command. **WMX 0** disables it.

### 2.2. Protocol Features

The WMX protocol was developed at Raveon Technologies Corporation with the following goals.

1. Provide an easy-to-use interface to a wireless point-to-multipoint network.
2. Add addressing capability to serial protocols and messages that do not have addressing.
3. Simplify user's software development tasks.
4. Allow the protocol to be implemented on 8-bit microcontrollers with limited resources.
5. Provision for addressing of transmissions by ID or group.
6. Provide secure access to internal modem configuration settings.

7. Provision for unacknowledged data transmission
8. Provision for acknowledged data transmission with delivery verification (tbt)
9. Enable remote control of certain product features such as digital I/O and GPS tracking.

### **2.3. Why another Protocol?**

Raveon's wireless modems have a very sophisticated over-the-air protocol that is hidden from the user's application. Raveon's modems "transparently" send and receive data, and technical issues such as addressing, re-transmission, and error-detection are handled internal to the Raveon wireless modem.

But customers were asking for external access to some of these features. They wanted to be able to easily address a data transmission, know if it was delivered, control a feature, or read a diagnostic message.

An extensive review of industry standard protocols revealed that internet protocols were too cumbersome to use on narrow-band data links. They are also complex to implement in customer's simple microcontrollers. Older data-link protocols such as X.25 or HDLC required specialized hardware to implement, and again, for the simple micro-controller, the software overhead required was excessive.

WMX is easy to implement. In some cases, it could be added to an existing design with only a few hours of software work. It provides a powerful interface to the wireless modem and the radio channel. A full implementation includes over 50 commands and features, but it also may be minimally implemented by only two simple messages – Send Data and Receive data.

### **2.4. WMX Protocol Stack**

The WMX protocol is the serial communications protocol used to communicate with a Raveon radio modem. Currently the M7 radio modem, M7 GX GPS transponder, The M8, M6, M21 and the ATLAS line of personal locators support WMX.

WMX is not an "over-the-air" protocol. It is a communication protocol that interfaces between the user's application and the Raveon radio modem. Effectively, it is a serial communication protocol. WMX message frames pass into the modem, and are converted to standard data transmissions, with the proper ID settings. A WMX enabled modem that receives data over the air, will format the data into the WMX receive data frame format before sending it out the serial port.

### **2.5. WMX Frames**

There are two fundamental uses for the WMX protocol; to transfer data, and to send commands.

#### ***Data Exchange***

WMX Data frames are used pass data bytes into a modem, so that the modem may send the data over the radio link. The data may be any ASCII or binary data the user wishes to send to a radio modem. Data sent into a modem using the

WMX protocol is sent over-the-air in the same format as if it had been sent into the modem's serial port. The only difference is that the WMX user was able to specify the destination ID that the data was to be sent to.

### **Commands**

The WMX Command frame is used to pass a command from an external device, to a local or remote radio modem. If the command was for the local modem, then it is executed by the local modem and the results returned back through to originating port. If the command is not for the local modem (Based on the ID), then the command is transmitted over-the-air, for processing by another radio modem in the system. Over-the-air commands are passed using Remote Procedure Requests (RPR). RPR is standard in all Raveon wireless modems, and the WMX protocol gives the user easy access to sending RPRs to any modem ID. Without WMX, the user would have cause the local modem to enter the command mode, manually enter the RPR command, and then wait for a response.

### **2.6. Enabling WMX**

On products that support WMX, there is a **WMX** command. **WMX 1** enables the protocol, and **WMX 0** disables it.

## 3. Frame Format

### 3.1. WMX Frame Format

WMX Frames are used to pass data into and out of a radio modem. The bytes in the data field of the frame, field 7, contains the data that is transferred. The same frame format is used to send and receive data.

#### *Data Frame Format*

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	Start of Header (SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field*1	Variable 0x40 – 0xFF	This byte contains frame control information specific to the type of frame.
2	0-4	Destination Address	ID in ASCII hex, 0000-FFFF	0-4 ASCII HEX representation of the destination address. For transmitting, may be left NULL (no characters). If NULL the destination address will then be set by the ATDT address programmed into the sending modem.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character 1.
3	0-4	Source Address (Optional when transmitting)	ID in ASCII hex, 0000-FFFF	0-4 ASCII HEX representation of the source address. For transmitting, usually left NULL (no characters) as the source address will then be set by the MYID address programmed into the sending modem.
	1	Separator 2 ( " )	34 (0x22)	Field separator character 2. (omitted if group number is not used)
4	0-4	Group Number (Optional when transmitting)	Group number in ASCII 0-255	0-3 ASCII decimal digits representing the group this Frame belongs to. Group 0=255 is the wildcard.
	1	Separator 3 ( # )	35 (0x23)	Field separator character 3 (when transmitting, may be left out if sequence field is not used)
5	0-4	Sequence (Optional)	ASCII number 0-255	A sequence number for this transmission to uniquely identify the message. Set to 0 or NULL to let the modem automatically assign the sequence.
	1	Separator 4 ( \$ )	36 (0x24)	Field separator character 4 (may be left out if info field is not used)
6	0-16	RSSI Field (Optional)	ASCII digits	RSSI Information about this packet.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		The data bytes sent/received by the user. May be any binary data bytes except the DLE ETX sequence. <i>See Binary Encoding</i> section on how to send 8-bit binary data.
	2	End of Text ( DLE ETX )	16 (0x10) 3 (0x03)	ETX end of the data frame

8	0 - 4	ASCII hex Checksum (Optional)	Variable 0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX. Most significant digit first.
	1	End of Transmission (EOT)	4 (0x04)	Indicates end of the frame

### 3.2. Control Field

The Control Field is used to identify the type of frame, and manage certain options.

Bit Num	7	6	5	4	3	2	1	0
Usage	Reserved	Always 1	MESSAGE STAT REQ	OTA ACK Requested	Frame Type			
Value (Set to 0 if reserved)	0	1	0 = no 1 = yes	0 = no 1 = yes	0 = Transmit Data Bytes 1 = Reserved for OEM use 2 = Received Data 3 = ACK received 4 = Command Request 5 = Command Response 6 = Transmit Raw Bits 7 = MESSAGE Status 8=WNC base station controls			

The lower 4 bits of the Control Filed identify the type of WMX frame being passed.

Bit 4 is used to specify if the user wishes the receiving modem to send an acknowledgement that the message was received. If bit 4 is 0, not ACK is requested. If it is 1, the receiving modem will automatically send a special ACK message back over-the-air to let the sending station know it received the message.

Bit 5, MESSAGE STAT REQ, tells the local device receiving this WMX frame that it must return two WMX "MESSAGE Status" frames back to the originator. The two messages are returned when:

- A) Receives this WMX message. All WMX devices will return a WMX MESSAGE status frame.
- B) Processes this WMX message completely.  
For transmitters, it will send a MESSAGE Status indicating TX success once the complete transmission has been sent.

Currently, products supporting the WMX protocol have frame buffers capable of handling WMX frames with up to at least 256 bytes of data.

### 3.3. WMX Control Byte List

0x40      Send Data, no ACK required (Use for normal WMX data communications between modems)

- 0x50 Send Data, ACK (Future Version)
- 0x42 Receive Data (Normal WMX message when a radio receives data over-the-air)
- 0x44 Send a command, no ACK required.
- 0x46 Transmit Raw Binary data bits at specified bit-rate and modulation type (Used to transmit POCSAG, GSC, and other binary messages. Some products do not support WMX *raw bit transmission*, so contact Raveon tech support if you wish to transmit Raw Bit messages).
- 0x45 Received a response to a command.
- 0x54 Send a command, ACK requested.
- 0x60 Send Data and request modem status updates.
- 0x47 Message status information.

### 3.4. Command Request Field Format

When exchanging commands or the results of commands, the bytes in the Data Field of the frame, field 7, contains information specific to requested type of command or the response returned.

#### *Data Frame Format*

<i>Field Number</i>	<i>Number of bytes</i>	<i>Field Name</i>	<i>ASCII Code</i>	<i>Function</i>
	1	(SOT)	1 (0x02)	Indicates beginning of a data
7	1-500	Control Field	Variable 0x40 – 0xFF	These bytes contain the command to be executed, in ASCII string format. A <CR> at the end of the string is not necessary.
	2	( DLE ETX )	20 (0x10) 3 (0x03)	ETX end of the data frame

### 3.5. Checksum

The 16-bit checksum is calculated by adding the unsigned binary value of all of the characters starting with the SOH through the ETX bytes. If the result exceeds 16 bits, the reported result should be truncated to 16 bits.

If the user does not wish to implement a checksum, do not put any characters in this field.

### 3.6. RSSI Field

An optional field, the **RSSI Field** may contain additional information about the frame. If present, the first digits following the Separator 4 character indicate the RSSI of the frame. The numbers are assumed to be negative numbers. (i.e. -73dBm will have a value of 73).



The RSSI Field is not required. The presence of the separator 4 character (0x24) indicates that it is present. Only products that support version C of the WMX protocol or higher will output the RSSI value when receiving data.

## 4. WMX Messaging

### 4.1. 0 Sending Data Bytes

To transmit user data over the air, so that other modems may receive it, a WMX Data Frame is sent with the Control Field set to 0x40. The data is sent over-the-air in Raveon's standard radio modem format, and any Raveon radio can receive it. WMX Data Frames simply allow the user to specify the ID the data is sent to.

**0x40** is the Control Field value for sending data, no ACK required back from the receiving modem.

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x40 no ACK 0x50 ACK req.	Identifies this as a WMX Data Frame
2	0-4	Destination Address	ID in ASCII	0-4 ASCII representation of the destination address.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character 1.
3	0-4	Source Address (Optional when transmitting)	ASCII number	0-4 ASCII representation of the source address.
	1	Separator 2 ( " )	34 (0x22)	Field separator character 2. (omitted if group number is not used)
4	0-4	Group Number (Optional when transmitting)	Group number in ASCII 0-255	0-3 ASCII characters representing the group this Frame belongs to. Group 0 is the wildcard. Leave this field out to use the group number set in the modem.
	1	Separator 3 ( # )	35 (0x23)	Record separator character 3 (when transmitting, may be left out if sequence field is not used)
5	0-4	Sequence (Optional when transmitting)	ASCII number 0-255	A sequence number for this transmission to uniquely identify it. Set to 0 or NULL to let the modem automatically assign the sequence. If it is set by the user, it must be incremented for each message.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		The data bytes sent may be any binary data bytes except the DLE ETX sequence.
	2	End of Text ( DLE ETX )	20 (0x10) 3 (0x03)	ETX end of the data frame
8	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	End of Transmission (EOT)	1 (0x04)	Indicates end of the frame

When a WMX capable modem receives a frame in the above format, it parses out the IDs and then sends the Data Field over the air, with a destination address as specified in field 2.

The sequence number is optional, but if the user specifies it in the WMX Frame, then each transmission to an individual ID should have a new sequence number. If the receiving modem also uses WMX, then the user at the receiving modem will also receive the sequence number as specified by the sending modem.

#### 4.2. 6 Sending Raw Binary Data

To transmit a raw bit-pattern over-the-air, use the WMX frame with the control byte set to **0x46**. This Raw Binary Data transmission WMX frame will only work in products that support WMX version 3.0 and higher. Contact Raveon customer support to determine which products support WMX 3.0. The data bits are not sent over-the-air in Raveon's standard radio modem format. They are transmitted using the specified modulation method and data rate.

This WMX frame is used to pass a pattern of bits into a radio so that the exact same pattern is transmitted on the air, at the specified baud rate and modulation format.

**0x46** is the Control Field value for sending Raw Binary Data Bits.

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x46 no ACK 0x56 ACK req.	Identifies this as a WMX Raw Binary Data transmission request
2	0-4	Destination Address	ID in ASCII	0-4 ASCII representation of the ID of the radio to send this message. Set to 0 for the local radio.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character 1.
3	1	Modulation Type (Optional when transmitting)	ASCII character corresponding to modulation	G = 2-level GFSK F = 2-level FSK
	1	Separator 2 ( " )	34 (0x22)	Field separator character 2.
4	0-4	Over-the-air baud rate	2-4 ASCII characters	Most product support standard baud-rates of 512, 600, 1200, 2400, 4800, 9600, 19200 bps. Refer to the tech manual of your transmitter to confirm baud rate support.
	1	Separator 3 ( # )	35 (0x23)	Record separator character 3 (when transmitting, may be left out if sequence field is not used)
5	0-4	Bit Count	ASCII number 0-9999	The number of bits in the data field to transmit over-the-air.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		The data bits sent may be any binary data bytes except the DLE ETX sequence. See binary encoding section. The first bit sent is the most-significant-bit

				of the first byte.
	2	End of Text ( DLE ETX )	20 (0x10) 3 (0x03)	ETX end of the data frame
8	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	End of Transmission (EOT)	1 (0x04)	Indicates end of the frame

When a WMX capable modem receives a frame in the above format, it parses out the bits from the Data Field, sets the baud rate and modulation type as specified, keys the transmitter, and sends the specified number of bits over the air. A digital 1 is positive deviation, and a digital 0 is negative deviation.

### 4.3. Binary Encoding

The Data Field of the WMX frame holds the data to be transmitted over the air. For any application that sends standard ASCII characters, no special formatting is required.

When sending binary data, there is a chance that the special WMX control characters may appear within the binary data. To ensure the control characters are not in the binary data, a byte-substitution technique is used. The data that is in the Data Field must not contain the special control codes 0x03 (ETX), or 0x04(EOT). IF the user wishes to send these characters, they must be replaced per the table below. The radio modem will restore them when they are transmitted over the air, so that the receiving station receives the correct binary data, including 0x03 and 0x04 characters.

Byte to Transmit	Bytes to replace it with
0xFF	0xFF 0x00
0x03	0xFF 0xFC
0x04	0xFF 0xFB
0x0D	0xFF 0xF2

For example, to send the following 3 bytes: 0x10 0x04 0x30 the user would load the Data Field of the WMX frame with 0x10 0xFF 0xFB 0x30.

### 4.4. Receiving Data

When a WMX capable modem receives over-the-air data, it outputs a WMX frame with the Control Field containing an ASCII 0x42 (and ASCII "B").

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x42	Identifies this as a WMX Receive Data Frame
2	0-4	Destination Address	ID in ASCII hex	0-4 ASCII representation of the destination address. In general, this will be the address of the receiving modem.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character.
3	0-4	Source Address	ID in ASCII hex	0-4 ASCII representation of the ID of the device that transmitted this data.
	1	Separator 2 ( “ )	34 (0x22)	Field separator character 2. (omitted if group number is not used)
4	0-4	Group Number	Group number in ASCII 0-255	0-3 ASCII characters representing the group this Frame was sent to.
	1	Separator 3 ( # )	35 (0x23)	Record separator character (when transmitting, may be left out if sequence field is not used)
5	0-4	Sequence	ASCII number 0-255	A sequence number for this transmission to uniquely identify it.
	1	Separator 4 ( \$ )	36 (0x24)	Record separator character
6	0-3	RSSI Field	0-127	The Received Signal Strength of this data, in negative dBm.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		The data bytes received over the air.
	2	End of Text	0x10 0x03	ETX end of the data frame
8	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	(EOT)	1 (0x04)	Indicates end of the frame

When a WMX capable data modem receives data over the air (with the correct ID), it outputs the data it receives in a WMX Data Frame as shown above. The ID of the unit that transmitted the data is in field 3, the Source Address. The ID that the data was sent to is in field 2, the Destination ID. The Control Field contains a 0x42.

*Addressing Note:* The Destination Address field, field 2, is the ID that the data was transmitted to. It may or may not match the exact ID of the receiving modem. For example, data sent to id 1234 will obviously be received by modem 1234. But, a modem with ID 1299 may also receive it if its address mask was set to FF00. A netmask of FF00 means the lower 2 digits of the ID are ignored.

*Fields 5 and 6 may or may not be present, so the receiving device should parse the frame for the frame separators, and act accordingly when a frame separator is found.*

The Start of Text (SOT) field separator indicates that the following characters are part of the received data.

The received data is embedded in field 7, the Data Field of the WMX frame.

**POCSAG Note:**

When a product capable of receiving POCSAG paging messages has WMX enabled on its serial interface, it will output the page information wrapped in WMX. The Source Address will be the programmed into ID of the product. The destination ID will be the POCSAG cap code of the message. The sequence number will count up each message, 0-255, and the RSSI field will be the RF signal level when the page was received.

**4.5. Binary Decoding**

The Data Field of the WMX frame holds the data received over the air. For any application that sends/receives standard ASCII characters, no special formatting is required.

When receiving binary data, there is a chance that the special WMX control characters were transmitted. To ensure the control characters are not in the binary data, a byte-substitution technique is used.

The 0xFF character is used to identify special binary data values. The hex number 0xFF is decimal 255. Whenever a 0xFF is in the Data Frame, the following byte indicates the actual desired binary data that should be received.

Actual Byte	Bytes Received
0xFF	0xFF 0x00
0x03	0xFF 0xFC
0x04	0xFF 0xFB

For example, if the Data Field contains the following 4 bytes: 0x10 0xFF 0xFB 0x30 the user must convert them to the actual binary data of 0x10 0x04 0x30 by replacing the 0xFF 0xFB sequence with 0x04.

## 4.6. Issuing Commands

All Raveon radios have a “Command Mode”. When they are in the Command Mode, the user may configure various features and settings. Typically, the user must enter a “+++” sequence into the serial port to enter the Command Mode, and when in the Command Mode, the radio cannot send or receive data.

WMX Command Frames may be used to issue command to a modem, without having to put it into the Command Mode. These command may also be issued to other radio modems in the network. If the WMX Command Frame has a destination ID that does not match the local radio modem, the local radio modem will transmit the command over-the-air, to the modem with the ID in the destination ID field, Field 2.

To transmit a command over the air, so that other modem(s) may process it, a WMX frame is sent with the Control Field must be set to 0x44 (ASCII “D”) or 0x54 (ASCII “T”). 0x44 specifies a WMX Command Frame, no ACK required, and 0x54 specifies a WMX Command Frame, with an ACK requested.

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x44 do not ACK 0x54 ACK req.	Identifies this as a WMX Data Command frame.
2	0-4	Destination Address	ID in ASCII	0-4 ASCII representation of the destination address. For the local radio us its MYID or 0000 as the destination address.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character.
3	0-4	Source Address (Optional when transmitting or issuing commands)	ASCII number	0-4 ASCII representation of the source address. Set to 0 when issuing commands to local radio.
	1	Separator 2 ( “ )	34 (0x22)	Field separator character 2. (omitted if group number is not used)
4	0-4	Group Number (Optional when transmitting)	Group number in ASCII 0-255	0-3 ASCII characters representing the group this Frame belongs to. Group 0 is the wildcard. Leave this field out to use the group number set in the modem.
	1	Separator 3 ( # )	35 (0x23)	Record separator character (when transmitting, may be left out if sequence field is not used)
5	0-4	Sequence (Optional when transmitting)	ASCII number 0-255	A sequence number for this transmission to uniquely identify it. Set to 0 or NULL to let the modem automatically assign the sequence.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
6	1-500	Data Field		The data bytes sent may be any binary data bytes except the DLE ETX sequence.
	2	End of Text ( DLE ETX )	20 (0x10) 3 (0x03)	ETX end of the data frame

7	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	End of Transmission (EOT)	1 (0x04)	Indicates end of the frame

When a WMX capable modem receives a WMX frame in the above format, it sends the command string, as specified in field 6, over the air with a destination ID set as specified in field 2. This will cause the receiving modem(s) to receive the specified command, and if their ID matches and group matches, to execute the command.

The command that is embedded in the Data Field, is in the same format as if were issued to the device locally while in the Command Mode. See the product's Technical Manual for information on supported commands.

Command type 0x54 requests an ACK. If an ACK was requested, the modem(s) executing the command will return an ACK message indicating they executed the command.

For example, the WMX command to read the firmware version of a remote modem with ID 1234 is as follows.

**(SOH), 0x54, 1234, 0x21, 0x21, 0x23, (SOT), ATVR, (DLE), (ETX),checksum, (EOT)**

0x54 identifies this WMX message as a command requiring a response.

1234 is the ID of the modem we are asking to report its firmware version.

ATVR is the command string to read the firmware version. All Raveon products with WMX will always respond to the ATVR command. It is the one universal command you can issue to verify communication with a device.

The data bytes returned in the data field will vary from command to command and product to product. Contact Raveon for information concerning responses to commands. Raveon's RadioManager software has a WMX tool built in to facilitate testing and implementing WMX.

### **Implementation Notes**

In general, the M7 series of Raveon products respond to commands by returning the command text, an equal sign, and the parameter. M8 series, Tech Series, and Daisy modems do not respond with the equal sign and parameter. The sequence number can be used to determine which command a particular response is related to.

In general, the Raveon M8 series returns OK if the command executed properly, or it returns the value if the command was a query. The sequence number of the WMX frame returned in response to a command should match the sequence number of the WMX frame that issued the command. This facilitates matching responses to commands.



## Commands that Support WMX

Some products support various commands that help implement WMX. Here is a list of commands related to WMX data exchanges that Raveon products may support. Refer to the product's technical manual to see if a particular command is supported.

### 4.7. Receiving Responses

When a WMX capable modem receives over-the-air response to a previous command, it outputs a WMX frame with the Control Field containing an ASCII 0x45 (an ASCII "-").

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x45	Identifies this as a WMX command response
2	0-4	Destination Address	ID in ASCII hex	0-4 ASCII representation of the destination address. In general, this will be the address of the receiving modem.
	1	Separator 1 ( ! )	33 (0x21)	Field separator character 1.
3	0-4	Source Address	ID in ASCII hex	0-4 ASCII representation of the ID of the device that transmitted this response.
	1	Separator 2 ( " )	34 (0x22)	Field separator character 2. (omitted if group number is not used)
4	0-4	Group Number	Group number in ASCII 0-255	0-3 ASCII characters representing the group this Frame was sent to.
	1	Separator 3 ( # )	35 (0x23)	Record separator character 3 (when transmitting, may be left out if sequence field is not used)
5	0-4	Sequence	ASCII number 0-255	A sequence number for this transmission to uniquely identify it.
	1	Separator 4 ( \$ )	36 (0x24)	Record separator character 4 Optional RSSI
6	0-3	RSSI	ASCII number 0-127	Receive signal strength in negative dBm.
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		The response bytes received over the air.
	2	End of Text	0x10 0x03	ETX end of the data frame
8	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	(EOT)	1 (0x04)	Indicates end of the frame

The control field is always a 0x45 for WMX responses.

When a WMX capable modem receives a response back from another modem over the air (with the correct ID), it outputs the response data it receives in a WMX frame as shown above. The ID of the unit that transmitted the data is in field 3, the Source Address. The ID that the data was sent to is in field 2, the Destination ID. The Control Field contains a 0x42.

If the command that instigated the response was properly executed, the Data Field will have an OK<13> in it.

#### **4.8. Modem Status Responses**

Transmitting data with control field 0x60 operates identical to control field 0x40 with the exception that up to two WMX messages will be generated by the transmitting modem and sent back out to the interface that the data transmission came in on. The messages will indicate the status of sending the message over-the-air, using the following format:

<b>Field Number</b>	<b>Number of bytes</b>	<b>Field Name</b>	<b>ASCII Code</b>	<b>Function</b>
	1	(SOH)	1 (0x01)	Indicates beginning of a frame
1	1	Control Field	0x47	Identifies this as a modem status message
2	4	Destination Address	ID in ASCII hex	0-4 ASCII representation of the destination address. This will be set to the source address from the original message
	1	Separator 1 ( ! )	33 (0x21)	Field separator character 1.
3	0-4	Source Address	ID in ASCII hex	0-4 ASCII representation of the ID of the radio generating the status message (the local, transmitting radio)
	1	Separator 3 ( # )	35 (0x23)	Record separator character 3
5	0-4	Sequence	ASCII number 0-255	A sequence number for this message to uniquely identify it. <i>This sequence number is unrelated to the sequence number of the original message whose status is being provided.</i>
	1	Start of Text (SOT)	2 (0x02)	Indicates beginning of data
7	1-500	Data Field		Modem status information (see below)
	2	End of Text	0x10 0x03	ETX end of the data frame
8	0 - 4	Checksum	0-FFFF	The 16-bit checksum of all the previous bytes, starting with the SOH through the end of the data bytes, not including DLE/ETX.
	1	(EOT)	1 (0x04)	Indicates end of the frame

#### **Modem Status Data Field**

A modem status message will have a data field with the following format:

<b>Number of bytes</b>	<b>Field Name</b>	<b>Data</b>
1	Message Status	ASCII Character Indicating a Message Status. It will be one of: 'Q' – Message has been accepted and queued for transmission 'N' – Message was not accepted for transmission and has been dropped 'T' – Message was sent over-the-air and has been fully processed 'L' – Message was processed locally (commands to the local radio) 'F' – Message was queued but subsequently flushed and not transmitted
1	Status Separator (,)	
1-3	Original Sequence Number	The sequence number of the original message (the message whose status is being provided). ASCII Decimal formatted.
1	Status Separator (,)	
1-4	Message TOID	The destination address of the original message (the message whose status is being provided). ASCII Hex formatted.

M8, M6 Radios with firmware D1 and higher may have two more fields added to the modem status data, as shown here.

1	Status Separator (,)	
1-3	WMX Count	Number of WMX messages stored in the inbound WMX buffer.
1	Status Separator (,)	
1-4	WMX Buffer Size	The number of WMX message that can be buffered in the device. .

(Note that only properly formatted WMX messages can be acknowledged. Improperly formatted messages will always be ignored.)

## **5. WMX Parsing Conventions**

---

Not all products support all features of WMX. And all products have various command sets that differ from product to product. So when building WMX frames and parsing WMX frames, the WMX user should make provisions for both missing fields and undefined fields.

The parsing logic when receiving a WMX frame should look for the filed separators, and parse the frame based upon the separators present.

Separators 3 & 4 may not be present in some products.

The parsing logic should always look for the SOT byte, which indicates the start of data.

The following field separators will always be present in a WMX packet. If there are not bytes in the field, it should be interpreted as NULL information.  
SOH, Separator 1, SOT, ETX, and EOT.